



Product Description

MASTER PL-T 2 Pin

Energy saving compact fluorescent lamp Compact long-arc low-pressure mercury discharge lamp Envelope consists of 6 parallel narrow fluorescent tubes

Benefits

- Optimal light performance for short or long operation per switch on
- Substantial more light (about 15% more) per light point than common
- Long life and sustainable light output

Features

- 2-pin base with a housing incorporating the lamp glow switch starter
- Fast light run up
- Philips invented bridge technology applied
- Dimming is not possible

Application


- Designed for general or supplementary lighting in professional and semi-professional environments
- Ideal for use in recessed or surface mounted downlighters, wall units

Warnings and Safety

- Use only with electromagnetic control gear
- Lamp light technical and electrical characteristics are influenced by operating conditions, i.e. lamp ambient temperature and operating position
- Dimming is not possible
- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

MASTER PL-T 2 Pin

Dimensional drawing

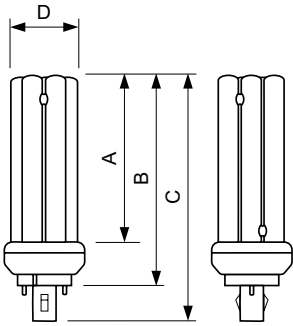

Product	D (max)	A (max)	B (max)	C (max)
MASTER PL-T 18W/840/2P 1CT/ 5X10BOX	41 mm	71.8 mm	96.0 mm	119.2 mm

