



Product Description

Accentline

Low-voltage halogen burner optically positioned in a glass reflector with and without front glass

Benefits

- Good light quality, cool beam halogen light and a professional lifetime


Features

- Dichroic reflector coating is heat-transmitting towards the back and light-reflecting towards the front of the lamp
- UV-Block burner
- Excellent colour rendering
- GU5.3 base for extra retention in luminaire
- 3,000 hour lifetime

Application

- Accent, task lighting and decorative applications in homes, shops, hotels and restaurants

Dimensional drawing

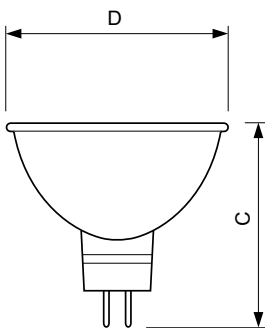

Product	D (max)	C (max)
Accentline 50W 4000h GU5.3 12V 36D 1CT/10X5F	51 mm	46 mm