



SmartBright All-in-one Solar Street Light

BRP110 LED50/757

Integrated solar street light with Lithium Ferro Phosphate battery, solar panel and charger built into the luminaire. The independently tilt-able LED source and pole-mounting bracket allow the light beam to focus on the road, and the solar panel to face the sun. Microwave-based motion sensor for optimising battery autonomy.

Product data

General Information		Configurability	
Driver included	Yes		Configurable
Optical cover/lens type	Polycarbonate	Mechanical and Housing	
Control interface	IR remote	Overall length	935 mm
Warranty period	2 years	Overall width	380 mm
Material	Aluminum	Overall height	95 mm
Operating and Electrical		Approval and Application	
Battery type	Lithium Ferro Phosphate	Ingress protection code	IP65 [Dust penetration-protected, jet-proof]
Battery ampere hour	24 Ah	Mech. impact protection code	IK08 [5 J vandal-protected]
Battery voltage	12.8 V	Initial Performance (IEC Compliant)	
Battery charging & discharging cycles	2000	Initial luminous flux (system flux)	5000 lm
Panel type	Mono crystalline	Lamp colour temperature	5700 K
Panel voltage	18 V	Colour Rendering Index	>70
Panel peak wattage	50 W	Application Conditions	
Charge controller type	MPPT	Ambient temperature range	-20 to +50 °C
Charge controller wattage	35 W	Ambient temperature range for charging	0 to +45 °C
Controls and Dimming		Ambient temperature range for discharging (when light is on)	-20 to +50 °C
Dimmable	Yes		

SmartBright All-in-one Solar Street Light

Autonomy	up to 24 h
Solar dimming profile	First 2 Hrs - On motion : 100%, without motion :30% ; Next 3 Hrs - On motion : 60%, without motion :20% ; Next 6 Hrs On motion : 30%, without motion :10% ; Rest of the Night: On motion : 50%, without motion :30%
Grid connection type	Off grid
Battery location	Inside Luminaire


Product Data

Full product code	871951450821700
--------------------------	-----------------

Order product name	BRP110 LED50/757
EAN/UPC – product	8719514508217
Order code	911401863681
SAP numerator – quantity per pack	1
Numerator – packs per outer box	1
SAP material	911401863681
SAP net weight (piece)	12.450 kg



Dimensional drawing

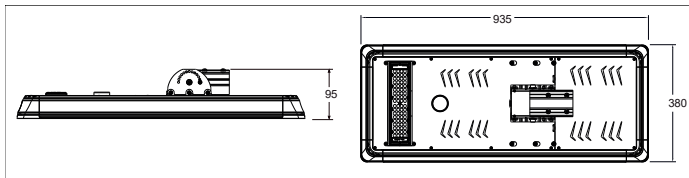

BRP110 LED50/757

