



# MSR Gold™ FastFit

## MSR Gold™ 1500 FastFit 1CT/4

All lamps burn out eventually, but when this happens with single ended MSR Gold™ FastFit, it is replaced in seconds – thanks to the specially designed lamp base and lamp holder. This lamp provides a high beam intensity of pure, white light for a truly illuminating performance, while the gold-plated caps provide superior heat protection and prevent premature failure. P3 technology allows use in any position and at higher temperatures, further extending lamp life and consistency of high-quality light output. Also, because the FastFit design is applied to Philips Halogen lamps, switching between lamp technologies can be done quickly and easily. The Philips MSR Gold™ 1200 FastFit can be operated in a lamp wattage range between 800W and 1400W.

### Warnings and Safety

- A lamp breaking is extremely unlikely to have any impact on your health. If a lamp breaks, ventilate the room for 30 minutes and remove the parts, preferably with gloves. Put them in a sealed plastic bag and take it to your local waste facilities for recycling. Do not use a vacuum cleaner.

### Product data

General Information		Operating and Electrical	
Cap base	PGJX50 [ PGJX50]	Colour Temperature, horizontal (Nom)	6000 K
Burning Position	UNIVERSAL [ Any/Universal]	Lamp Luminous Efficacy EM (Nom)	80 lm/W
Main application	Entertainment	Colour Rendering Index,horiz (Nom)	80
Life to 50% failures (nom.)	750 h	Power (Rated) (Nom)	1500 W
System description	FastFit	Lamp current (nom.)	15.3 A
Light Technical		Ignition supply voltage (min.)	198 V
Lamp Luminous Flux 25°C EL (Min)	100600 lm	Controls and Dimming	
Lamp Luminous Flux 25°C EL (Nom)	120000 lm	Dimmable	Yes
Chromaticity coordinate X (nom.)	323		
Chromaticity coordinate Y (nom.)	333		

# MSR Gold™ FastFit

## Mechanical and Housing

Cap-base information PGJX50

## Luminaire Design Requirements

Bulb temperature (max.) 950 °C

Pinch temperature (max.) 500 °C

## Product Data

Full product code 871829122134000

Order product name MSR Gold™ 1500 FastFit 1CT/4

EAN/UPC – product 8718291221340

Order code 928107305115

SAP numerator – quantity per pack 1

Numerator – packs per outer box 4

SAP material 928107305115

SAP net weight (piece) 0.131 kg



## Dimensional drawing



Product	D (max)	O	L (min)	L (max)	L	C (max)	F
MSR Gold™ 1500 FastFit 1CT/4	28 mm	6.3 mm	64 mm	66 mm	65 mm	128 mm	50 mm

## MSR GOLD 1500 FastFit

## Photometric data

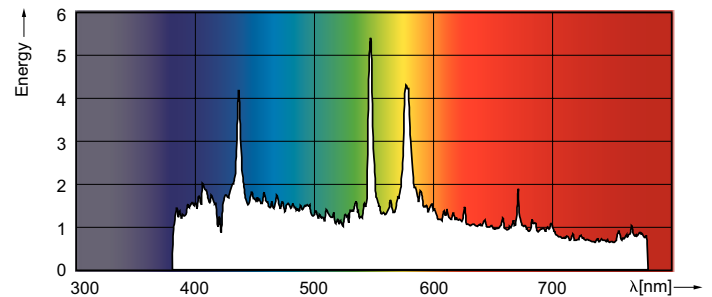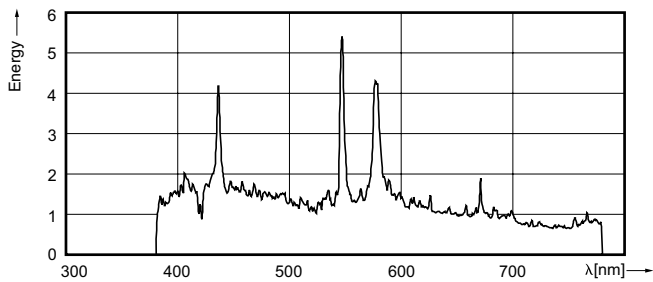

XDPB\_XDMSR\_0002-Spectral power distribution B/W

XDPO\_XDMSR\_0002-Spectral power distribution Colour

