



# MASTER LEDspot PAR

## MAS LEDspot D 13-100W E27 927 PAR38 25D

With its robust design and warm-white beam of light, these new-generation PAR lamps are ideal for general lighting and spot lighting in the hospitality industry. There is a choice of dimmable and non-dimmable versions. They are especially suitable for public areas such as lobbies, corridors, stairwells, where the light is always on. Compatible with existing fixtures with an E27 holder and designed for retrofit replacement of halogen/incandescent lamps, MASTER LEDspot PAR deliver huge energy savings and minimize maintenance cost without any reduction in brightness. The IP44-rated outdoor version of the PAR 38 lamp is one of the few energy-saving alternatives to incandescent PAR38 outdoor lamps available today. The dimmable PAR 20 is a perfect replacement for an incandescent spot.

### Product data

General Information	
Cap base	E27 [ E27]
EU RoHS compliant	Yes
Nominal lifetime (nom.)	25000 h
Switching cycle	25,000X
Technical type	13-100W
Light Technical	
Colour Code	927
Technical Beam Angle (Nom)	25 °
Lamp Luminous Flux 25°C EL (Nom)	1000 lm
Luminous intensity (nom.)	4000 cd
Colour Designation	Warm white (WW)
Colour Temperature, horizontal (Nom)	2700 K
Lamp Luminous Efficacy EM (Nom)	76.92 lm/W
Colour consistency	<6
Colour Rendering Index,horiz (Nom)	90

LLMF at end of nominal lifetime (nom.)	70 %
Operating and Electrical	
Input frequency	50 to 60 Hz
Power (Rated) (Nom)	13 W
Lamp current (nom.)	65 mA
Wattage equivalent	100 W
Starting time (nom.)	0.5 s
Warm-up time to 60% light (nom.)	0.5 s
Power factor (nom.)	0.9
Voltage (Nom)	220-240 V
Temperature	
T-Case maximum (nom.)	80 °C

# MASTER LEDspot PAR

## Controls and Dimming

Dimmable	Yes
----------	-----

## Approval and Application


Energy efficiency label (EEL)	A+
Suitable for accent lighting	Yes
Energy consumption kWh/1,000 hours	13 kWh

## Product Data

Full product code	871869671410200
-------------------	-----------------

Order product name	MAS LEDspot D 13-100W E27 927 PAR38 25D
EAN/UPC – product	8718696714102
Order code	929001322508
Numerator – quantity per pack	1
SAP numerator – packs per outer box	6
Material no. (12 NC)	929001322508
Net Weight (Piece)	0.385 kg



## Dimensional drawing

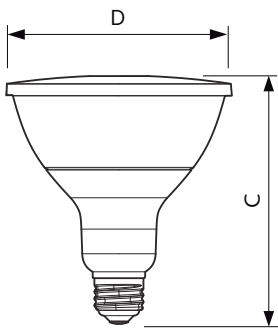

PAR38 220-240V 13-100W 2700K E27 D

Product	D	C
MAS LEDspot D 13-100W E27 927 PAR38 25D	122 mm	134 mm

## Photometric data

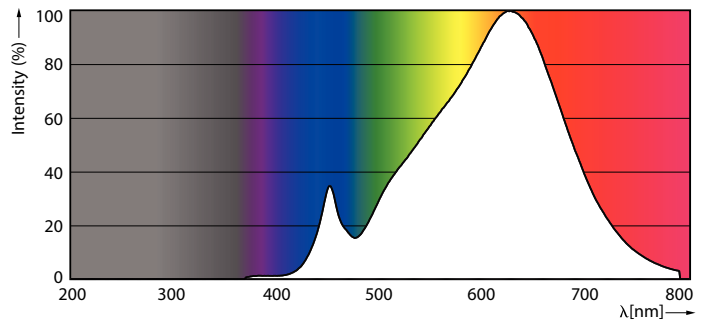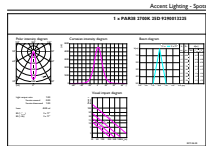


MASTER LEDspot PAR 100W E27 827 25D

MASTER LEDspot PAR 100W E27 827 25D

# MASTER LEDspot PAR

## Photometric data

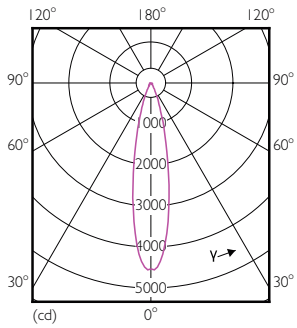

MASTER LEDspot PAR 100W E27 827 25D

## Lifetime



MASTER LEDspot PAR 50W E27 827 25D



MASTER LEDspot PAR 50W E27 827 25D

